

User Manual

Contents:

Precaution and Notice

In the Box

Basic Introduction

1. Over View
2. Accessory
 - 2.1 Charging by AC adapter
 - 2.2 Charging by Car Charger
 - 2.3 USB Cable usage
 - 2.4 Install the Car Mount System

Main function introduction

1. Starting up
2. Power saving
3. Main Functions
 - 3.1 GPS
 - 3.2 Music
 - 3.2.1 Music Play
 - 3.2.2 Music List
 - 3.2.3 Equalizer
 - 3.3 Movie
 - 3.3.1 video
 - 3.3.2 video list
 - 3.4 Photo
 - 3.4.1 photo
 - 3.4.2 photo list
 - 3.4.3 full screen
 - 3.5 Ebook
 - 3.5.1 Ebook
 - 3.5.2 Ebook List
 - 3.5.3 Font Setting
 - 3.5.4 Color Setting
 - 3.5.5 bookmark
 - 3.5.6 bookmark list
 - 3.6 Flash
 - 3.6.1 Flash List
 - 3.7 Bluetooth
 - 3.7.1 Dial
 - 3.7.2 Dail Record
 - 3.7.3 Pair
 - 3.7.4 Setting
 - 3.7.5 Pair Devices
 - 3.7.6 Outgoing call
 - 3.7.7 call fail

- 3.7.8 incoming call
- 3.7.9 active call
- 3.7.10 GPRS Settings

3.8 Games

- 3.8.1 Memory
- 3.8.2 Linlink
- 3.8.3 Russia Block
- 3.8.4 JawBreaker
- 3.8.5 BoxMan
- 3.8.6 BreakOut
- 3.8.7 Snake

3.9 Tools

- 3.9.1 Calculator
- 3.9.2 Unit

3.10 Setting

- 3.10.1 Volume
- 3.10.2 Backlight
- 3.10.3 Language
- 3.10.4 FM Transmitter
- 3.10.5 DateTime
- 3.10.6 Calibration
- 3.10.7 System Info
- 3.10.8 USB
- 3.10.9 Factory Reset
- 3.10.10 Nav Path

3.11 GPS Info

Precaution and Notice

- GPS is operated and controlled under the sole responsibility of the Government of the United States of America, who are responsible for its availability and accuracy. Any changes in GPS availability and accuracy, or in environmental conditions, may impact the operation of your device. We can not accept any liability for the availability and accuracy of GPS.
- The PND is used only as a navigation aid. It is not for precise measurement of direction, distance, location or topography. The user must follow all traffic signs and local regulations along the roads.
- GPS satellite signals cannot pass through solid materials (except glass). When you are inside a tunnel or building, GPS position is not available.
- A minimum of 4 GPS satellite signals are needed to determine current location. Signal reception can be affected by situations such as bad weather or wireless devices or dense overhead obstacles (e.g. tall buildings).
- When you get out of the car, do not leave your PND on the dashboard or subject to direct sunlight. The overheating of the battery may cause malfunctions and/or dangerous conditions.
- For your own safety, do not operate the controls of the PND while driving. Do not mount where the driver's field of vision is blocked

In the Box

 
In the box you will find

Portable navigation device (PND)	SD memory card (Plugged in the unit)*
AC adapter*	Car charger
Car mount system	Carry case*
User manual	Software manual*
USB cable	Warranty Card*

* Optional accessories

I Basic Introduction

1. Overview

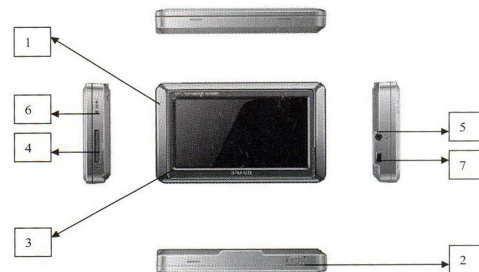

- (1) Charger Indicator Light
- (2) Power Switch
- (3) Speaker
- (4) SD Card Slot
- (5) Earphone Jack
- (6) Reset Key
- (7) USB Connector

2. Accessory

2.1 Charging by AC adapter

Please use the AC adapter to charge the device for the first time. To maximize the life of the battery, the device must be full of charge for the first time.

Plug the adapter's DC port into the device's USB port on its right-side panel

Plug the adapter into the main supply socket.

 
The charging indicator will light. When the unit is fully charged, the red indicator will turn blue.



2.2 Charging by Car Charger

The car charger supplies power to your device when you are using the device in a car.

Caution: To protect your device against sudden surges in current, connect the car charger only after the car engine has been started. Connect one end of the car charger to the power connector of your device. Connect the other end to the cigarette lighter in the car to power and charge your device.

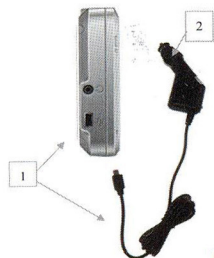

1. Device power connector
2. Vehicle power connector

2.3 USB Cable usage

The USB cable is provided for system upgrades. This USB cable will work on the PC either with Microsoft Active Sync® or as a mass storage media. You can select the mode in the "Setting-USB" menu.

For upgrade and more information about Microsoft Active Sync, please visit Microsoft web.



2.4 Install the Car Mount System

 
Take off the protected film on the bottom of the suction. Then put the bracket onto a suitable location of your windscreen or side window, make sure the window or the suction or windscreen is clean and without water and some dirty things inside, fixing the stand on that position. Never place the stand where the driver's field of vision is blocked.

If the car's windshield is tinted with a reflective coating, an external antenna (optional) may be needed to route the roads. The external antenna is stick to the top of the car through a window. When closing the car window, be careful not to pinch the antenna cable (Cars with an anti-jam window design may automatically leave adequate space as needed.).

Install PND into the holder

To remove the bracket, three steps as below:


Press 2 side button, pull left lightly and then take off the suction. If the bracket still doesn't detach from your windscreen, tug gently on the clear plastic tab at the edge of the suction mount, to break the vacuum seal.

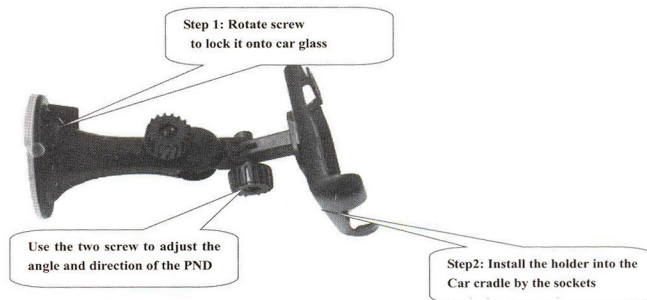

II Main function introduction

1. Starting up

 
Insert the supplied SD card (optional) into the slot at the bottom of device.

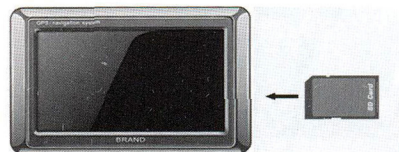

Starting up then enter into the main function operation screen as below.

 


2. Power saving



Press the power button  on the top side of your device to turn off your device, the device actually enters a suspend state and the system stops operation. Once you turn on the system again, it resumes.

3. Main Functions

Press the power button to turn on the GPS unit. The Main Menu screen will be displayed as below:

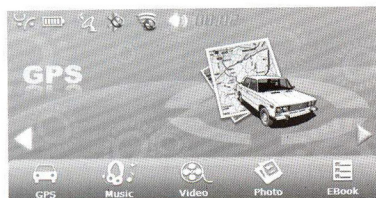

Tap the icon  or  can choose function

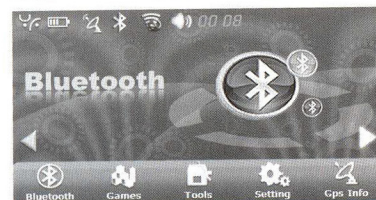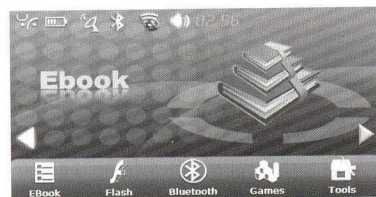  


3.1 GPS

Double tap the "GPS" icon  or  to start program.





 3.2 Music

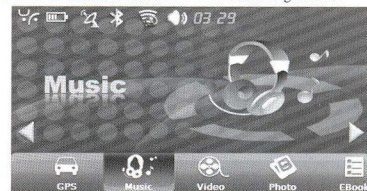Tap the icon "Music" on the main menu and enter into following interface.



3.2.1 Music Play

 
Tap the "Music" icon  or  on the main menu again and enter into following interface.



- A: return to the main menu
- B: minimize
- C: order of play: random, repeat, single, play all, repeat all
- D: equalizer
- E: previous
- F: speed bar
- G: pause/play
- H: next
- I: stop
- J: music list
- K: volume control

3.2.2 Music List


Tap the "Music List" icon and enter into the following interface.

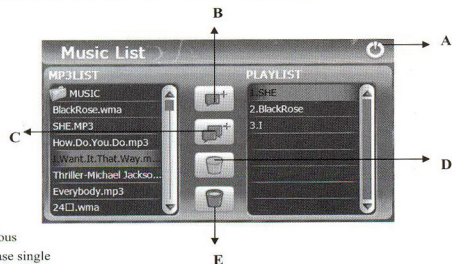

- A: previous
- B: increase single
- C: increase all
- D: delete single
- E: delete all

3.2.3 Equalizer

 Tap the "Equalizer" icon and enter into the following interface.

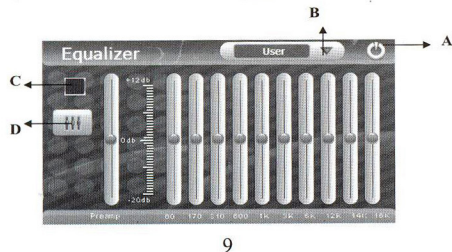

- A: previous
- B: tap it and can select play style as blew interface
- C: tap it and can use the equalizer
- D: reset the equalizer





 
3.3 Movie

Tap the icon "Video" on the main menu and enter into following interface.




3.3.1 video


Tap the "video" icon  or  on the main menu again and enter into following interface.

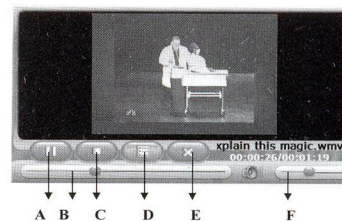

- A: pause/play
- B: speed bar
- C: stop
- D: video list
- E: return to the main menu
- F: volume control

3.3.2 video list

 Tap the  icon and enter into the following interface.

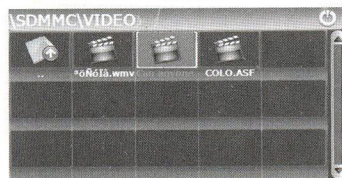



3.4 Photo

Tap the icon "Photo" on the main menu and enter into following interface.



3.4.1 photo


Tap the "Photo" icon  or  on the main menu again and enter into following interface.

 


A B C D E F G H

- A: previous
- B: next
- C: zoom in
- D: zoom out
- E: rotate
- F: full screen
- G: photo list
- H: return to the main menu

3.4.2 photo list

Tap the  icon and enter into the following interface.

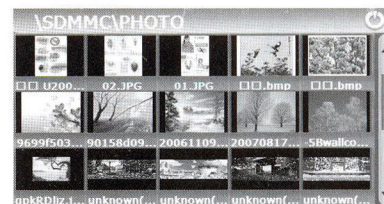

3.4.3 full screen

Tap the "photo list" icon and enter into the full screen.
Then tap the screen again and enter into the following interface.

 


A

A: set time for playing picture, 1s~10s.
Previous: tap the screen once more


3.5 Ebook

Tap the icon "Ebook" on the main menu and enter into following interface.

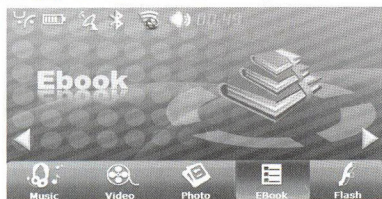

3.5.1 Ebook

 
Tap the icon  or  on the main menu again and enter into following interface.

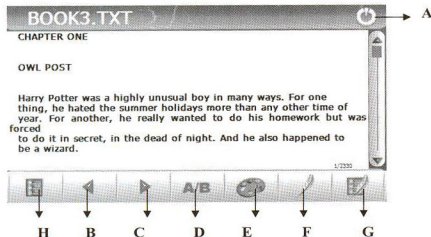

- A: return to the main menu
- B: previous
- C: next
- D: font setting
- E: color setting
- F: bookmark
- G: bookmark list
- H: ebook list


3.5.2 Ebook List

 Tap the icon "ebook list" and enter into following interface.

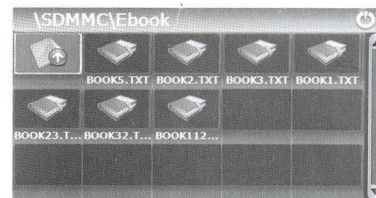

3.5.3 Font Setting

 Tap the icon "font setting" and enter into following interface.

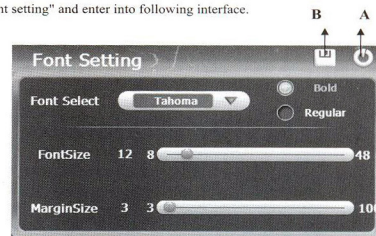


A: previous

B: saving

3.5.4 Color Setting

 
Tap the icon "color setting" and enter into following interface.

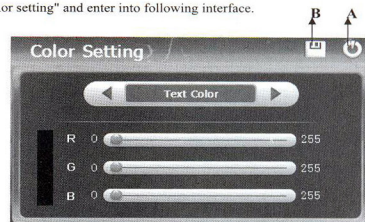


A: previous

B: saving


3.5.5 bookmark

 Choose to add as part of the bookmark text, click on the  icon, and enter into following interface. Choose "OK" or "Cancel"

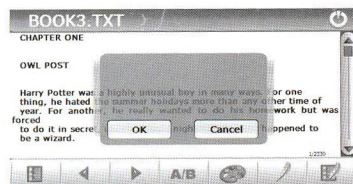

3.5.6 bookmark list

 Tap the icon "bookmark list" and enter into following interface.

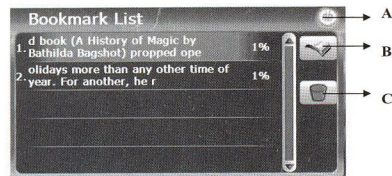




- A: previous
- B: enter into bookmark
- C: delete bookmark

3.6 Flash

Tap the icon "Flash" on the main menu and enter into following interface.



 
Tap the icon  or  on the main menu again and enter into following interface.

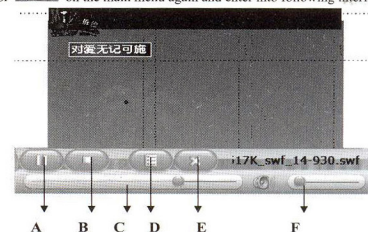

- A: pause/play
- B: stop
- C: speed bar
- D: flash list
- E: return to the main menu
- F: volume control


3.6.1 Flash List

 Tap the icon "flash list" and enter into following interface.

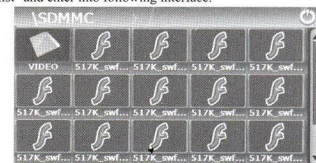


3.7 Bluetooth

 
Tap the icon "Bluetooth" on the main menu and enter into following interface.

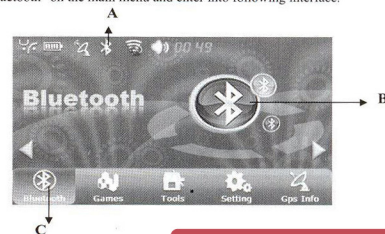


 Tap the icon A or B or C on the main menu again and enter into following interface.

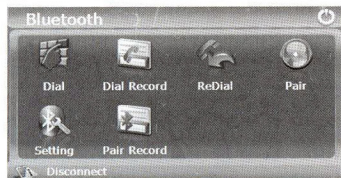


3.7.1 Dial

 
Tap the icon  on the Bluetooth menu and enter into the following interface.

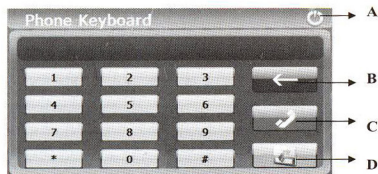

- A: return to the Bluetooth menu
- B: backspace
- C: pair and connect with the mobile you want
- D: call Record


3.7.2 Dial Record

 
Tap the icon  on the Bluetooth menu and enter into the following interface.

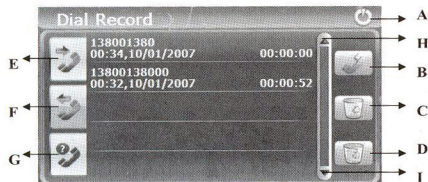

- A: return to the Bluetooth menu
- B: connect with the mobile you want
- C: delete the recorded number you chose
- D: delete all the call records
- E: incoming call record
- F: outgoing call record
- G: missed call record
- H: previous
- I: next


3.7.3 Pair

 Tap the icon  on the Bluetooth menu and enter into the following interface.

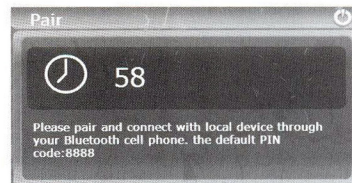


3.7.4 Setting

  Tap the icon  on the Bluetooth menu and enter into the following interface.

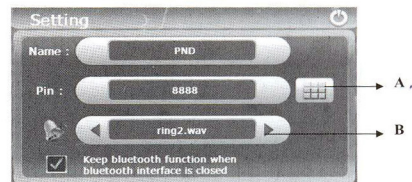


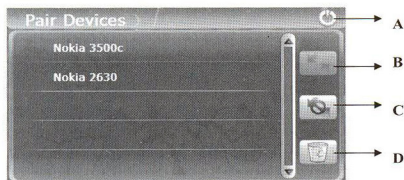 
- A: PIN setting
- B: music selecting

Tap "PIN setting" button and enter into the following interface.

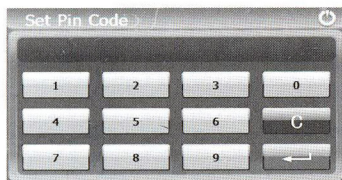

 
3.7.5 Pair Devices

Tap the icon  on the Bluetooth menu and enter into the following interface.




- A: return to the Bluetooth menu
- B: connect the Devices you chose
- C: disconnect the Devices you chose
- D: delete all the Devices information


3.7.6 Outgoing call

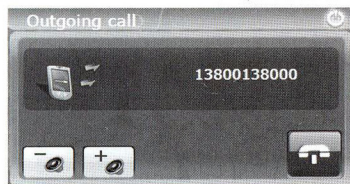

 
3.7.7 call fail

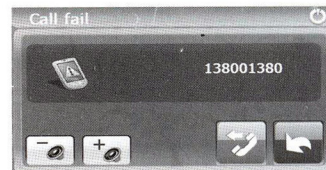

 3.7.8 incoming call

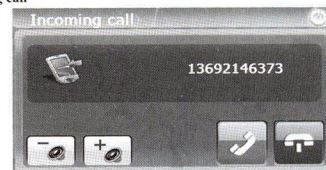

 
3.7.9 active call

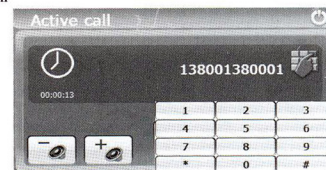

3.7.10 GPRS Settings

(including information of the Blue Tooth)

 - A. Blue Tooth Name
- B. Passcode: Through the button next to the small keyboard set to enter the passcode interface;
- C. Blue Tooth Ringtone Settings: Enter the small button next to a ringing tone selection screen;
- D. "After turn off the Bluetooth interface to maintain the Bluetooth function" Selection box: The default is selected. That is, turn off the Bluetooth interface. Calls will still be left with the corresponding .If cancel, then close the Bluetooth, meanwhile Bluetooth function also be closed. then calls will no longer appear

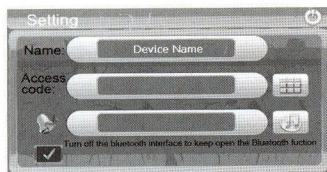


E. Accesscode settings. (maximum of 16 characters input and displayed). Click the "settings" interface inside accesscode button next to the small keyboard will pop up the interface.

Interface button instruction:

c : Cancel of a key figure

← : Confirm pin code

 After re-setting the accesscode. Matching pair of new mobile phone will no longer enter the default "8888" and to enter a new accesscode, otherwise it is can not match.

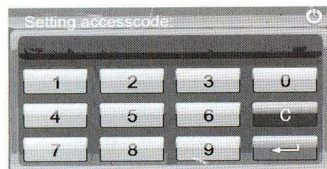

F. Setting match well, can enter Dun dial number list, if matching mobile phone support DUN (Dial-up Internet Service) then the pattern below list should have revealed that the cell phone's Bluetooth name:

G. Double click one option and enter to "GPRS setting" interface. The right or left of interface can select Service operator, it is related with the SIM card of mobile phone, in different countries have different choices.

 
After select operator well, click "connect" and dial number.

If the current has set up a dial-up connection, then it will clew you disconnect the current connection or not. As below:




H. Dial-up need time period, the upper interface from disconnect become to connect, it is an open port, to connect to the mobile phone, as well as service client authentication process.

After the success of a dial-up, the program will automatically run a browser (Beta) is as follows:

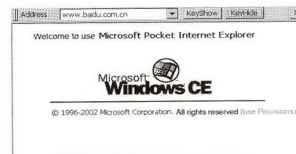

 I. Bluetooth interface can also click "ie" button to enter the browser:

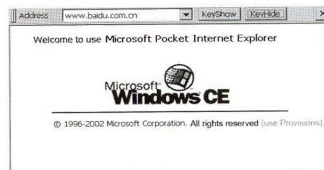



Notice: The beta version of the browser can only browse the Web, can only input Address to the browser frame, enter the address. Not to do at the interactive web pages, can not enter information in Web pages.

3.8 Games

Tap the icon "Games" on the main menu and enter into following interface.



Tap the icon  or  on the main menu again and enter into following interface.




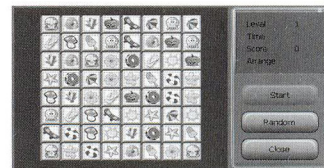 
3.8.1 Memory

Tap the icon  and enter into following interface.



 
3.8.2 Linlink

Tap the icon  and enter into following interface.



3.8.3 Russia Block

Tap the icon  and enter into following interface.

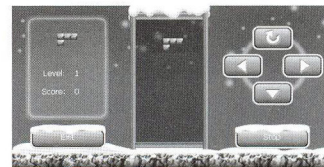


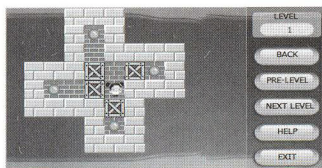 
3.8.4 JawBreaker

Tap the icon  and enter into following interface.




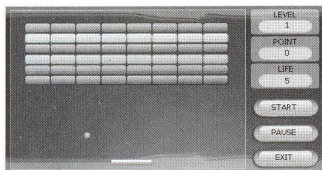 
3.8.5 BoxMan

Tap the icon  and enter into following interface.




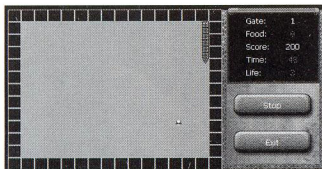 
3.8.6 BreakOut

Tap the icon  and enter into following interface.



 
3.8.7 Snake


Tap the icon  and enter into following interface.




3.9 Tools


Tap the icon "Tools" on the main menu and enter into the following interface.

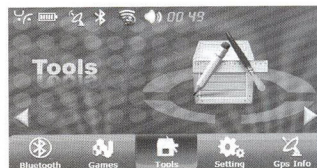


 Tap the icon  or  on the main menu again and enter into following interface.

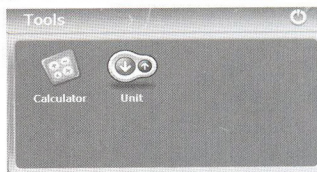


3.9.1 Calculator

 
Tap the icon  and enter into following interface.

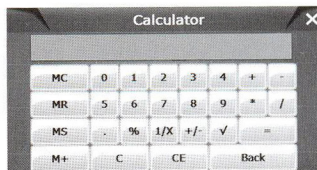

3.9.2 Unit

 Tap the icon  and enter into following interface.

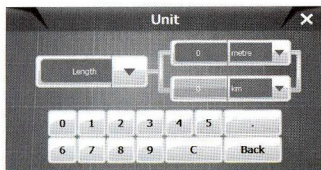

Unit: Length, Weight Mass, Cubic Capacity, Square Area, Circular Angular, Power, Pressure, Speed, Temperature



3.10 Setting

Tap the icon "Setting" on the main menu and enter into the following interface.

 


Tap the icon  or  on the main again menu and enter into following interface.

 


3.10.1 Volume

Tap the icon A on the main meun or B on the system as below

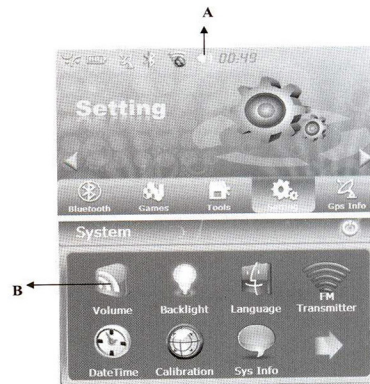


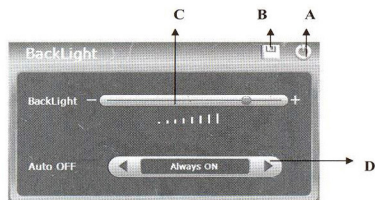 
And enter into following interface.

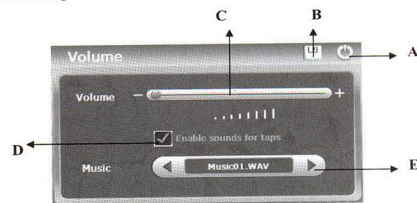

- A: previous
- B: saving
- C: volume control
- D: can select "Enable sounds for taps" or not
- E: star-up music


3.10.2 Backlight

 
Tap the icon  on the system meun and enter into following interface



- A: previous
- B: saving
- C: backlight control
- D: select auto off time


3.10.3 Language

Tap the icon  on the system menu and enter into following interface.

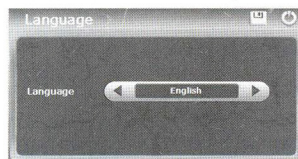


3.10.4 FM Transmitter

 Tap the icon A on the main menu or B on the system menu as below

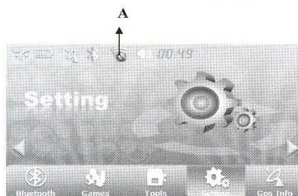

And enter into following interface.

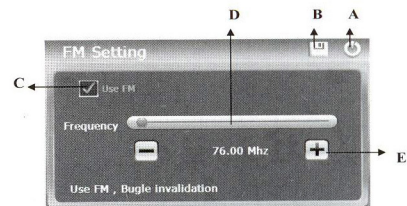 

- A: previous
- B: saving
- C: select use FM
- D: select emissive frequency of FM
- E: tap "+" or "-" icon to increase or decrease the emissive frequency of FM

 
3.10.5 DateTime

Tap the icon A on the main menu or B on the system menu as below





And enter into following interface.

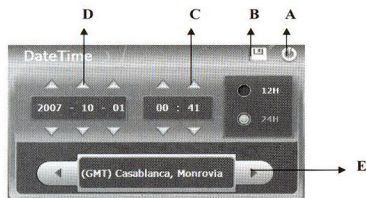

A: previous

B: saving

 
C: tap or icon to adjust the time

D: tap or icon to adjust the date

E: tap "<" or ">" icon to adjust the time zone.


3.10.6 Calibration

Tap the icon on the system menu and enter into following interface.

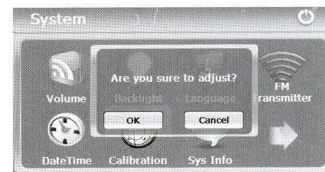


3.10.7 System Info

 Tap the icon A on the main menu or icon B on the System menu as below

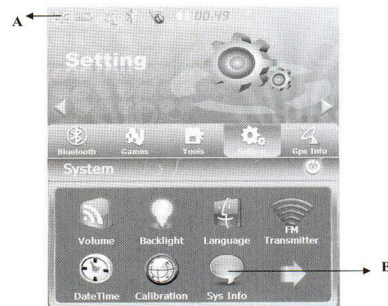

And enter into the following display

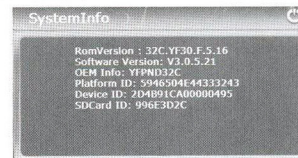 


3.10.8 USB

Tap the icon on the System menu, to set the USB working mode.




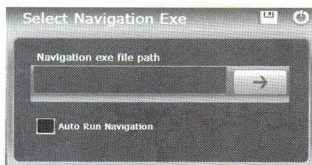 
3.10.9 Factory Reset

Tap the icon  on the System menu and enter into following interface.



3.10.10 Nav Path

Tap the icon  on the System menu and enter into following interface.

 


3.11 GPS Info


Tap the icon "GPS Info" on the main menu and enter into the following interface.



Tap the icon A or B or C on the main menu as below

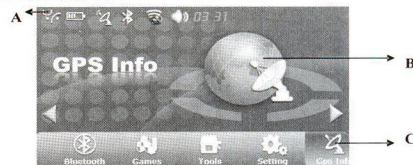

And enter into the following interface

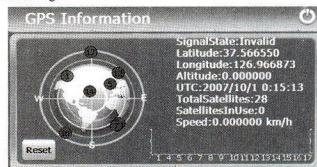 

This document is for guidance only and does not form part of any contract, and may be subject to change without notice.